




3D Printed Coach Dynamo

- Remove item from packing.
- Carefully wash with warm soapy water and rinse and leave to air dry.
- Remove print supports with a sharp blade:

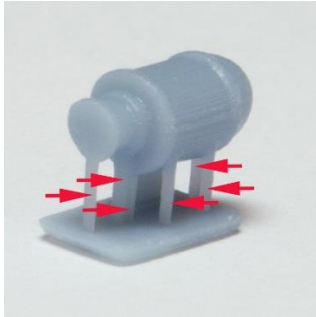

- If you wish to spray prime your item, you might do it now.
- Attach the item to your model with superglue or epoxy resin glue.
- Paint to match underframe.